


 


EVC Line Card Installation Guide

1 Adding a Line Card

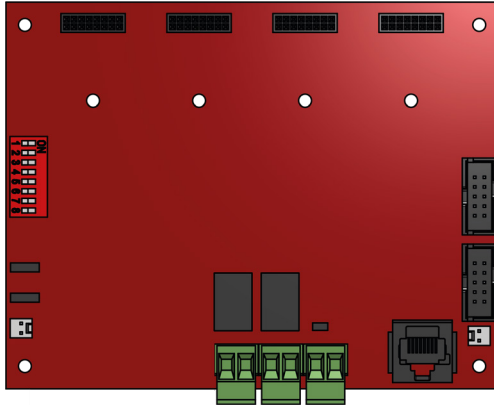

Exchange PCB



Line PCB

The Crisis EVC Standalone Master Station is supplied with at least one number Line Card. There are 2 lines per Line Card.

Before adding a Line Card, ensure that the Master Station is not powered. If the Master Station is powered, then power down the Master Station.

To fit the Line Card:

1. Place Line Card in the next available space on the Exchange PCB and secure using the supplied screw.
2. Remove the line terminal and connect the field wiring.
3. Push the terminal into the correct position on the Line Card.
4. Set the dipswitch on the Display PCB, see 6.1 to enable Line Card monitoring.

Once the Line Card is securely fitted, power up the Master Station.

2 Removing a Line Card

Before removing a Line Card, ensure that the Crisis EVC Standalone Master Station is not powered. If the Master Station is powered, then power down the Master Station.

To remove the Line Card:

1. Remove all line terminals from the Line Card that is to be removed.
2. Remove the securing screw.
3. Remove the Line Card from Exchange PCB.
4. Set the dipswitch on the Display PCB, see 6.1 to disable Line Card monitoring.

Once the Line Card has been removed, the Master Station may be powered.