


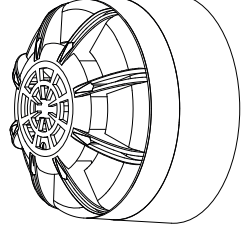
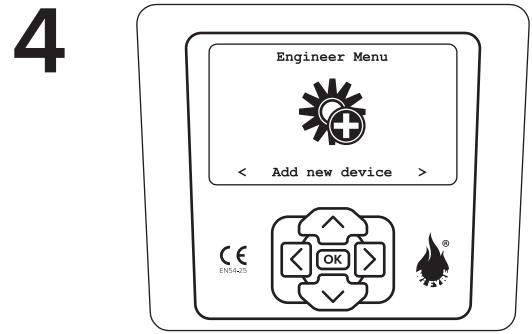


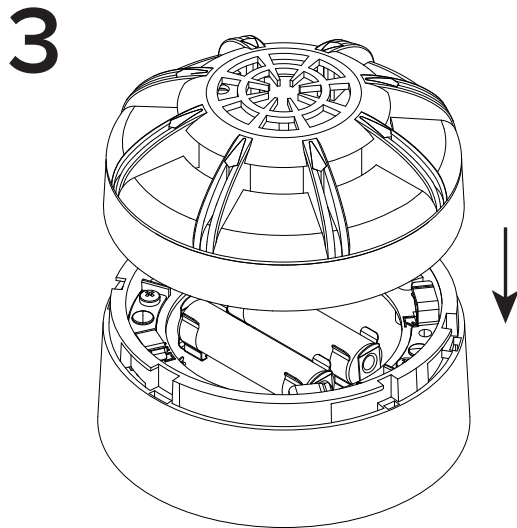




Wireless Heat Detector
Installation Guide

Part No. 10-011, 10-012, 10-014

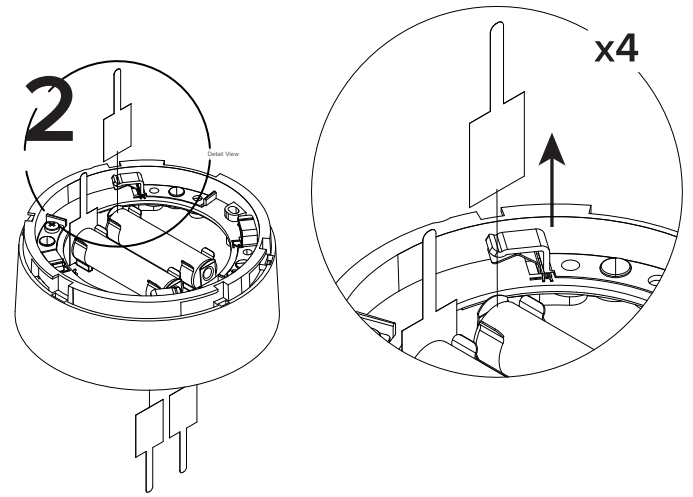

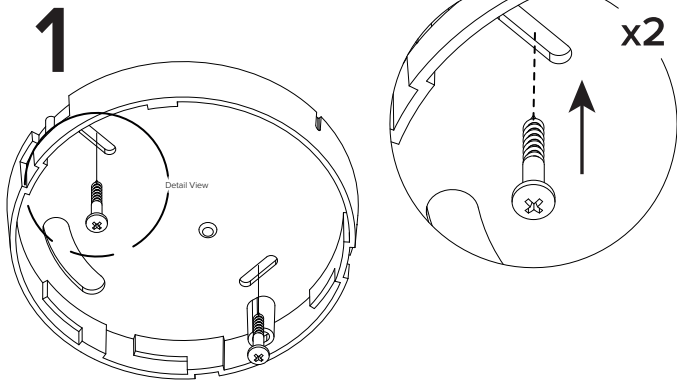

1. Enter Engineering Menu
2. Scroll to Add new device
3. Enter menu

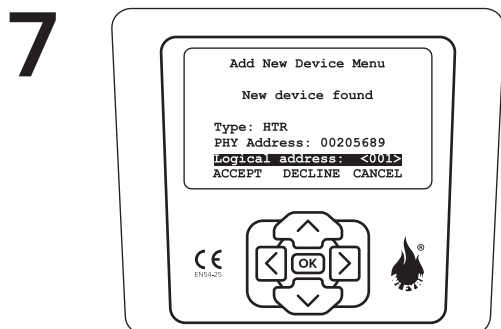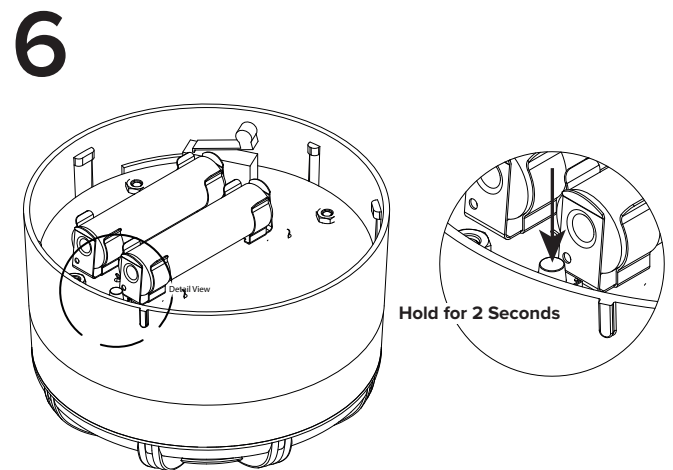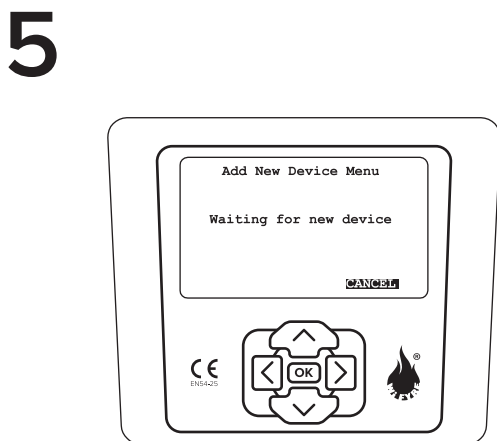

1. Select the device type 'HTR' or 'HTS'
2. Choose the logical address
3. Accept the new device

